



The Power Behind the Storage

FastFrame™ SmartNIC 10/25/40/50/100Gb Ethernet Adapter Getting Started Guide

Thank you for purchasing the ATTO FastFrame SmartNIC 10/25/40/50/100Gb Ethernet Adapter. This guide gives you the basics for installing and configuring your adapter. For more information, please visit our website at www.atto.com

Overview

This guide covers hardware and software installation, setup procedures, and troubleshooting tips for ATTO FastFrame SmartNIC 10/25/40/50/100Gb Ethernet adapters. Ensure you have the equipment and software you need for the installation:

- FastFrame SmartNIC 10/25/40/50/100Gb Ethernet Adapter card
- A computer with an available PCIe 3.0 expansion slot
- Cables
- ATTO ConfigTool™ Configuration and Management Utility

System Requirements

Before installing the ATTO FastFrame SmartNIC 10/25/40/50/100Gb Ethernet Adapter, please check your system for the following minimum configuration requirements:

Supported Operating Systems

- macOS®
- Microsoft Windows®
- Microsoft Windows Server®
- Linux®



Note

Please visit <https://www.atto.com/support/interoperability/> for details on specific supported operating systems

Installing Drivers

Configure your system to recognize and use your FastFrame NIC by installing drivers for your operating system.

macOS

1. Power on your system and log in as the administrator or user with proper administrative privileges

ATTO Technology, Inc.

155 CrossPoint Parkway
Amherst, New York 14068 USA
www.atto.com

Tel (716) 691-1999

Fax (716) 691-9353

Sales support: sls@attotech.com

Technical support: techsupp@attotech.com (716) 691-1999 x242

© 2021 ATTO Technology, Inc. All rights reserved. All brand or product names are trademarks of their respective holders. No part of this document may be reproduced in any form or by any means without the express written permission of ATTO Technology, Inc.

09/2021

PRMA-0486-000

2. Go to <https://www.atto.com/downloads>
3. Register or login if previously registered
4. Click on **Ethernet Adapters** and then **10/25/40/50/100GbE Network Interface cards** in the dialog box
5. Scroll down and select the latest **macOS** driver version listed
 1. A download window appears. Choose **Save File**.
 2. Open the download file to extract and launch the driver setup program
 3. Follow the onscreen instructions to complete the driver installation

Windows

1. Power on your system and log in as the administrator or a user with proper administrative privileges.
2. Go to <https://www.atto.com/downloads>
3. Register or log in if previously registered
4. Click on **Ethernet Adapters** and then **10/25/40/50/100GbE Network Interface cards** in the dialog box
5. Navigate to **ATTO Ethernet Suite for Windows** in the right dialog and click on it.

 **Note** *ATTO Ethernet Suite includes an ATTO hardware driver for Windows 10 with option to install ATTO 360 and 360 View along with Driver installation*

6. Scroll down to and click the **Windows** download.
7. A download window appears. **Choose Save File**.
8. Double-click the downloaded file to extract and launch the ATTO 360 Ethernet Suite.
9. Follow the on-screen instructions to complete the software installation.

 **Note** *Optional 360 View - if you decide to opt in and install 360 View a time series database will be stored on your local machine*

Linux

1. Power on your system and log in as the administrator or a user with proper administrative privileges.
2. Go to <https://www.atto.com/downloads>
3. Register or log in if previously registered.
4. Click on **Ethernet Adapters** and then **10/25/40/50/100GbE Network Interface cards** in the dialog box
5. Navigate to **ATTO 360 Ethernet Suite** in the right dialog and click on it.
6. Scroll down to and click the **Linux** version of ATTO Ethernet Suite

 **Note** *ATTO Ethernet Suite is an installer package that includes ATTO hardware driver as well as ATTO 360 software and optional 360 View time series database*

7. A download window appears. Choose **Save File**.

8. After the download has completed, open the ATTO 360 volume on the desktop.
9. Open the Linux folder.
10. Copy the .tgz file to a temporary folder.
11. Open a terminal window and change the location of the copied tgz.

ATTO 360™ Optimization, Configuration, and Management Utility


ATTO 360™ is an all-purpose application for Ethernet storage optimization featuring performance tuning, analytics, and monitoring tools designed specifically for your new ATTO FastFrame SmartNIC, visit ATTO.com at <https://www.atto.com/landing/atto360> to download your free copy and get the most out of your ATTO product.


Hardware Installation

 **Note** *If you are replacing an existing adapter with a new adapter, you must re-install the driver.*

Insert a PCIe Adapter in the Server

1. Turn off the server and unplug the power cord, then remove the server's cover.

 **CAUTION** *Turn off and unplug the server before removing the server's cover. Failure to do so could endanger you and may damage the adapter or server.*

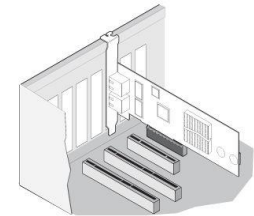

2. Remove the cover bracket from a PCIe slot. PCIe slots and adapters vary in the number of connectors present, depending on the data lanes being supported.
3. Insert the adapter in an available, compatible PCIe slot. Push the adapter into the slot until the adapter is firmly seated. The adapter can be installed in a x8 or x16 mechanical PCIe slot.

 **CAUTION** *Some PCIe adapters may have a short connector. Excessive force could break the connector. Use caution when pressing the board in the slot.*

4. Repeat steps 2 through 3 for each adapter you want to install.
5. Replace the server cover and plug in the power cord.
6. Turn the power on.

Insert optical trans receiver modules

If utilizing QSFP 28, QSFP+, SFP28 or SFP+ modules, please ensure the modules are inserted into specified ports. If using direct-attached copper cables with integrated modules, wait until Step 5 is complete.

Connect a 10/25/40/50/100GbE Ethernet Network Cable

Configure Network Settings

We recommend using ATTO 360™ to help with configuring settings, make performance optimizations, and diagnose bottlenecks.

Consult your System Administrator or system documentation for more info on configuring network settings.

Configure your Adapter

ATTO 360™ has several configuration profiles designed to optimize your new ATTO SmartNIC. Download it at our website at <https://www.atto.com/landing/atto360> and get access to these 1-click setups that make dozens of setting adjustments instantly.